



## Formatting USB Drive for USB Messenger

1. Place the USB Drive into an empty USB slot on your computer and wait for Windows to recognize the drive.
2. Once the drive is recognized, then double click on the “My Computer” icon. Once open the window should look like this:

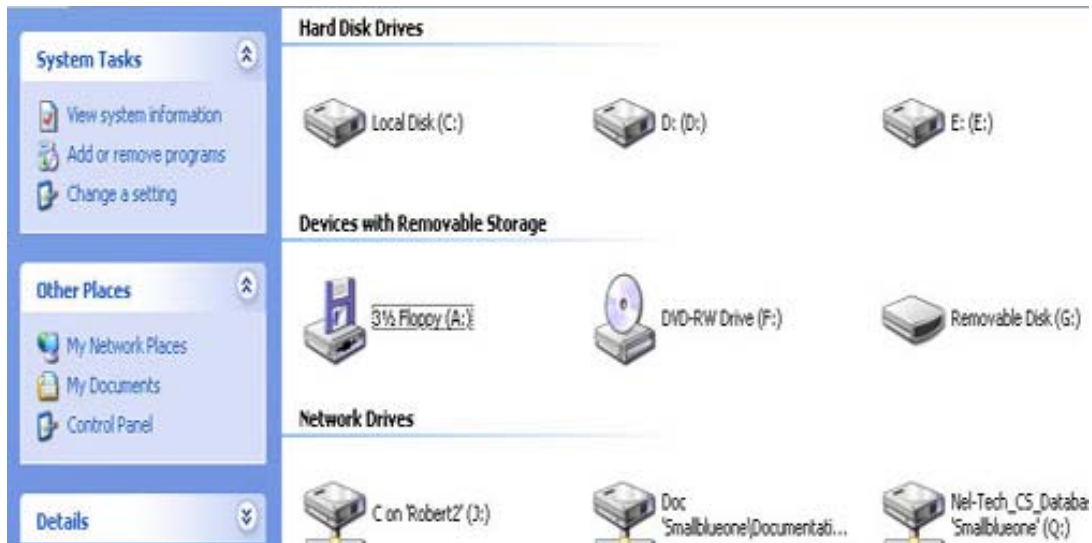

3. Look for the Removable Disk. In this case Windows has assigned it letter (G:)
4. Right click on the drive and select “Format”. See picture below:

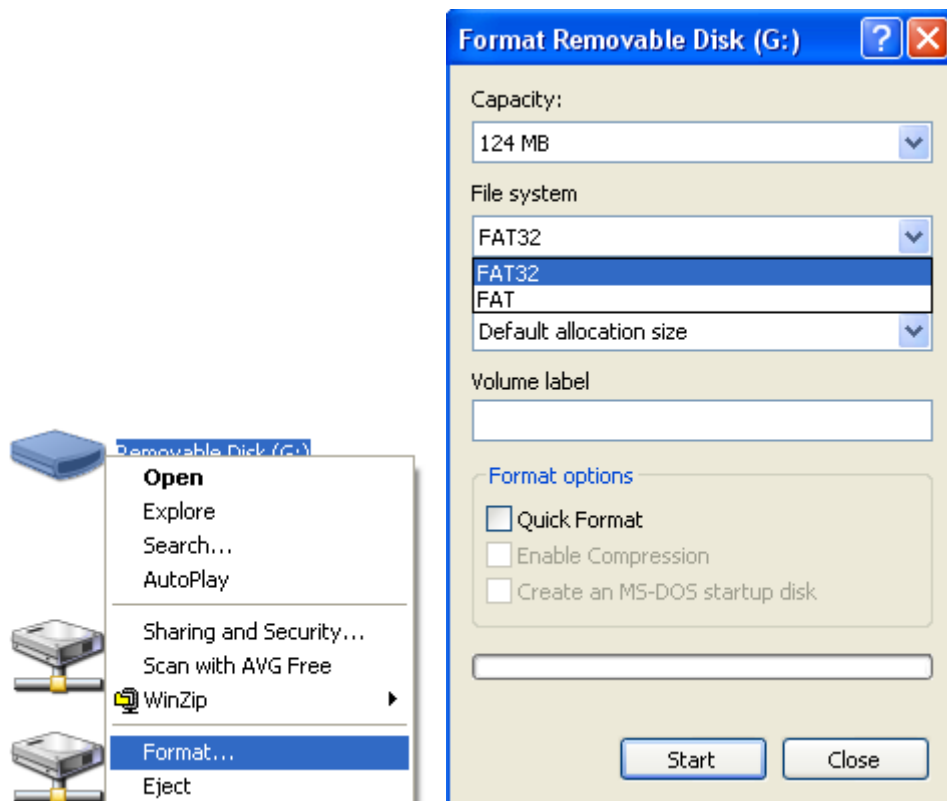

5. Select “FAT” or use “FAT32” when available and click start.